RGBlink VIEWSIZE THE WORLD


MSP 204 - Quick Start

For full installation, configuration, and operation details, please refer to Refer to www.rgblink.com, for the Refer to www.rgbunk.com for the complete user manual and installation NOTE MSP 204 user manual, which is available at www.rgblink.com.

complete user manual and instanting the This guick start provides basic instructions for an experienced installer to set up and operate MSP 204.

Interface Description

Input Interface

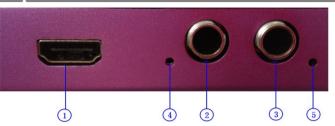

Interfaces

HDMI Input Port Audio Input port

(4)(5)

Indicator

HDMI Input

Input the video signal from HD player, DVD player and computer, etc.



Audio Input


Input audio signals from DVD player, set top box, hardware player, etc.



Indicator

When input analog audio signal, LED indicator4, 5 light, when input digital AES/EBU signal, LED indicator4 lights.

Output and Other Interface

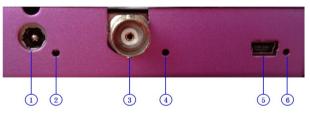

Interfaces

Power

(2)(4)(6)

Indicator

SDI Output port

USB Interface

SDI Output

Can connect the next level device with SDI interface.



USB Interface

Used to control the computer.

Indicator

Power indicator 2 lights when device has power supply.

LED indicator 4 lights when output SDI signal. LED indicator 6 lights when connect USB to computer.

Wernerious neince connecting

Power


Connect one end of the power adapter with the device, the other end into a socket. Plug in, power indictor light means the device works normally.

The device uses the standard 12V/3A power supply.

Interface Description



Functional Description Block Diagram

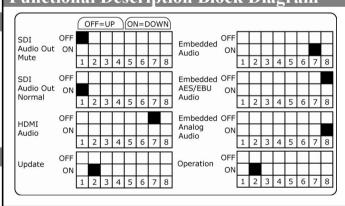

Instructions

The dial switch upwards is OFF, downwards is ON:

1. Dial switch1 OFF: mute.

OFF	- IO	1
ON	I	1
	1 2 3 4 5 6 7 8	1

2. Dial switch 1 ON: cance			
OFF			
ON O	1		
1 2 3 4 5 6 7 8	1		
3. Dial switch 2 must be set to ON.			
OFF	1		

ON | O

|1|2|3|4|5|6|7|8 | 4. Dial switch 7 OFF: HDMI embedded audio output, no

analog audio and AES/EBU audio output.

OFF	: [\bigcirc	1
ON	I		1
	1 2 3 4 5 6	7 8	Ī

5. Dial switch 7 ON, no HDMI embedded audio output, analog or AES/EBU audio output (depend on dial switch 8).

OFF	1		
ON	1	0	
	1 2 3 4 5 6	7 8	ĺ

6. Dial switch 7 ON, dial switch 8 OFF: AES/EBU output, no analog audio output.

OFF	I	0	l	
ON	I ©		I	
	1 2 3 4 5 6 7 8	;	1	

7. Dial switch 7 ON, dial switch 8 ON: L-analog and Ranalog audio output, no AES/EBU output.

```
OFF I
ON I
                         \bigcirc \bigcirc
     |1|2|3|4|5|6|7|8 |
```


Functional Description

Functional Description

- 1. HDMI input to SDI output.
- 2. Support input and output resolution of 480i, 576i, 720p, 1080i and 1080p.
- 3. Support left and right analog sound channel input, digital AES/EBU input, HDMI embedded audio input and mute function.

- 4. The LED indicator beside SDI interface lights when output SDI signal.
 - When input analog audio signal, the LED indicators beside L-ANALOG and R-ANALOG light. When input digital AES/EBU signal, the LED indicator beside L-ANALOG or AES/EBU lights.

Functional Description Block Diagram

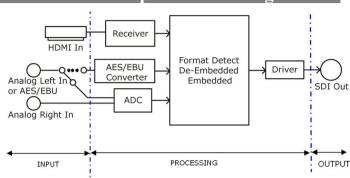

Address S603-604 Weiye Building Torch Hi-Tech Industrial Development Zone Xiamen, Fujian Province, P.R.C Tel: 00865925771197

MSP 204 Quick Start Fax:00865925771202 Version 1.3 Email: sales@rgblink.com http://www.rgblink.cn Page 2 of 2